


I-6009-S2

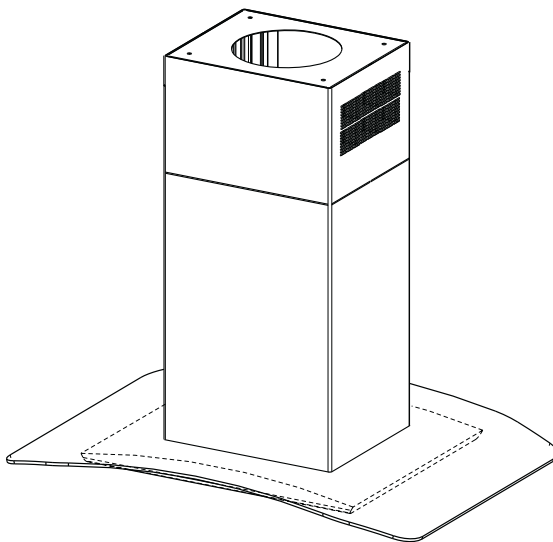

Instructions Manual
Käyttöohje

INDEX

EN

RECOMMENDATIONS AND SUGGESTIONS	3
CHARACTERISTICS	4
INSTALLATION.....	6
USE	10
MAINTENANCE	11

SISÄLTÖ

FI

OHJEET JA SUOSITUKSET	12
MITAT JA OSAT	13
ASENNUS	15
KÄYTTÖ	19
HUOLTO	20

RECOMMENDATIONS AND SUGGESTIONS

⚠ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

INSTALLATION

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.

- For Class I appliances, check that the domestic power supply guarantees adequate earthing.

Connect the extractor to the exhaust flue through a pipe of minimum diameter 125 mm. The route of the flue must be as short as possible.




- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air. When the cooker hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.
- In the event of damage to the power cable, it must be replaced by the manufacturer or by the technical service department, in order to prevent any risks.


USE

- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambé under the range hood: risk of fire
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- "CAUTION: Accessible parts may become hot when used with cooking appliances."

MAINTENANCE


- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
- Clean the hood using a damp cloth and a neutral liquid detergent.

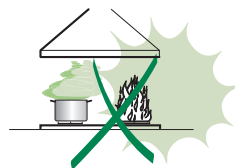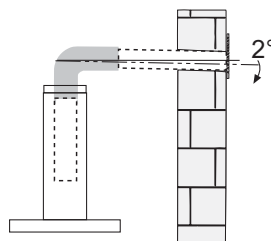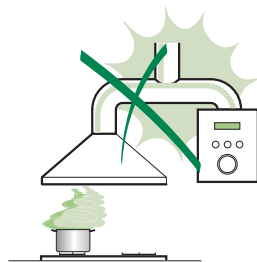

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

CHARACTERISTICS

Dimensions

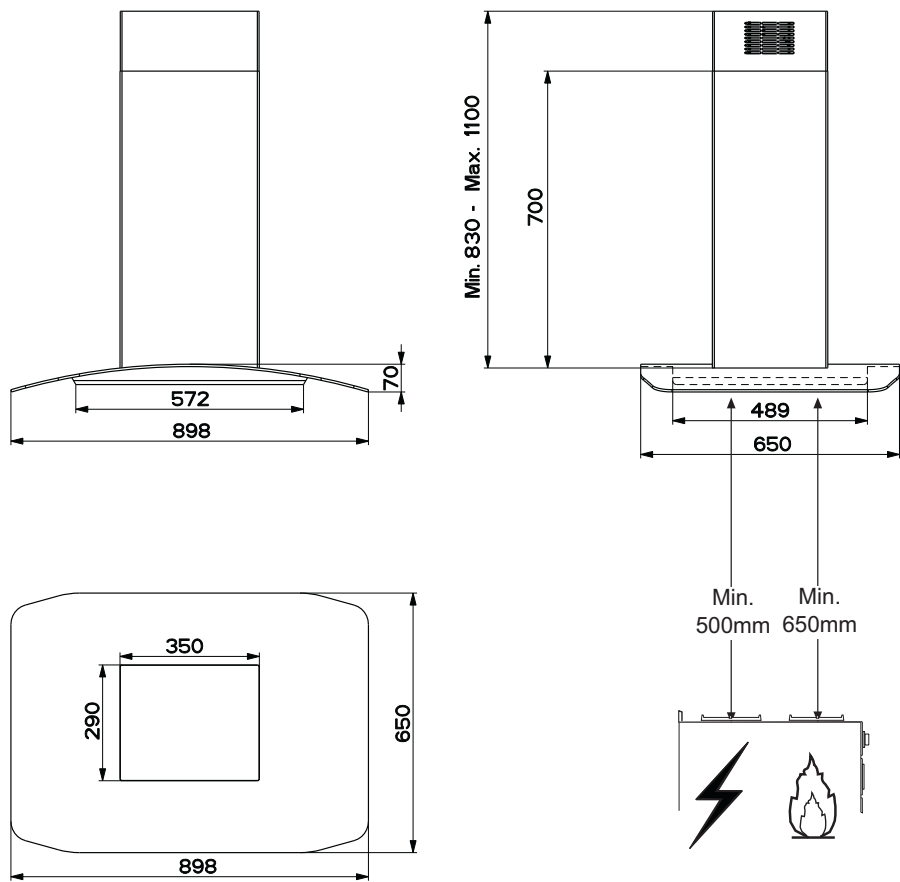



Components

Ref.	Q.ty	Product Components
1	1	Hood Canopy complete with: Controls, Lights, Filters
2	1	Telescopic chimney made up of:
2.1	1	Upper chimney
2.2	1	Lower chimney
7.1	1	Telescopic frame complete with Suction fan, made up of:
7.1a	1	Upper frame
7.1b	1	Lower frame
9	1	Reduction flange ø 150-120 mm
10 a	1	Damper
10 b	1	Adapting ring ø 120-125 mm
14.1	2	Air Outlet Connection Extension
15	1	Air Outlet Connector
24	1	Connection box
25		Pipe clamps (not included)
26	2	Cable clamps
27	1	Finishing plug

Ref.	Q.ty	Installation Components
7.3	1	Bracket for Air Outlet Connector
11	4	Wall Plugs ø 10
12c	8	Screws 2,9 x 6,5
12e	4	Screws 2,9 x 9,5
12f	2	Screws M4 x 80
12g	4	Screws M6 x 80
12h	4	Screws 5,2 x 70
12q	4	Screws 3,5 x 9,5
21	1	Drilling template
22	8	6.4 mm int. dia washers
23	4	M6 nuts

Q.ty	Documentation
1	Instruction booklet

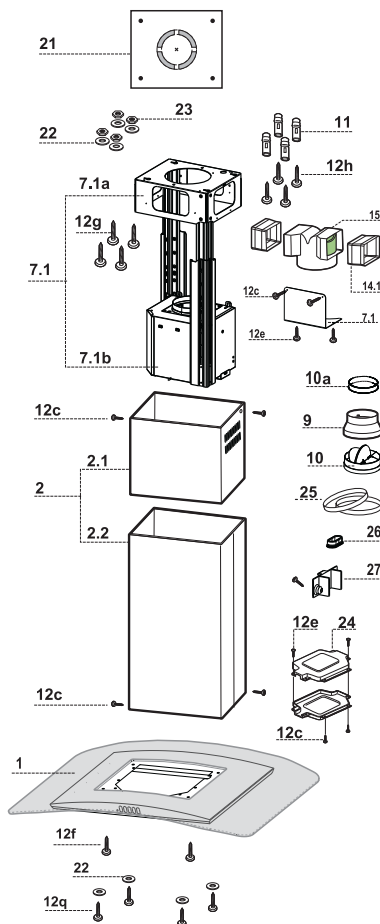

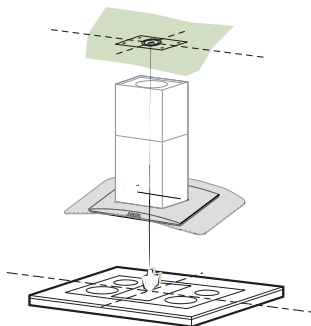

Drilling the Ceiling/shelf and fixing the frame

DRILLING THE CEILING/SHELF

- Use a plumb line to mark the centre of the hob on the ceiling/support shelf.
- Place the drilling template **21** provided on the ceiling/support shelf, making sure that the template is in the correct position by lining up the axes of the template with those of the hob.
- Mark the centres of the holes in the template.
- Drill the holes at the points marked:
 - For concrete ceilings, drill for plugs appropriate to the screw size.
 - For hollow brick ceilings with wall thickness of 20 mm: drill \varnothing 10 mm(immediately insert the Dowels **11** supplied).
 - For wooden beam ceilings, drill according to the wood screws used.
 - For wooden shelf, drill \varnothing 7 mm.
 - For the power supply cable feed, drill \varnothing 10 mm.
 - For the air outlet (Ducted Version), drill according to the diameter of the external air exhaust duct connection.
- Insert two screws of the following type, crossing them and leaving 4-5 mm from the ceiling:
 - For concrete ceilings, use the appropriate plugs for the screw size (not provided).
 - for Cavity ceiling with inner space, with wall thickness of approx. 20 mm, Screws **12h**, supplied.
 - For wooden beam ceilings, use 4 wood screws (not provided).
 - For wooden shelf, use 4 screws **12g** with washers **22** and nuts **23**, provided.

Fixing the frame

- Loosen the two screws fastening the lower chimney and remove this from the lower frame.
- Loosen the two screws fastening the upper chimney and remove this from the upper frame.

If you wish to adjust the height of the frame, proceed as follows:



- Unfasten the metric screws joining the two columns, located at the sides of the frame.
- Adjust the frame to the height required, then refit all the screws removed as above.
- Insert the upper chimney stack from above, and leave it running free on the frame.
- Lift up the frame, fit the frame slots onto the screws up to the slot end positions.
- Tighten the two screws and fasten the other two screws provided with the hood.

Before tightening the screws completely it is possible to adjust the frame by turning it. Make sure that the screws do not come out of their seats in the slotted holes.

- The frame mountings must be secure to withstand the weight of the hood and any stresses caused by the occasional side thrust applied to the device.

On completion, check that the base is stable, even if the frame is subjected to bending.

- In all cases where the ceiling is not strong enough at the suspension point, the installer must provide strengthening using suitable plates and backing pieces anchored to the structurally sound parts.

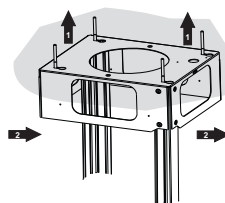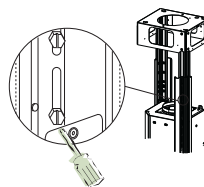

Connections

DUCTED VERSION AIR EXHAUST SYSTEM



When installing the ducted version, connect the hood to the chimney using a rigid pipe \varnothing 150 or 125mm, the choice of which is left to the installer.

To install a \varnothing 150

- To install the dumper **10a**.
- Fix the pipe in position using sufficient pipe clamps (not supplied).


To install a \varnothing 125

- To install a \varnothing 125 mm air exhaust connection, insert the reducer flange **9** on the dumper **10a**.
- To install the Adapting ring **10b**.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove any activated charcoal filters.

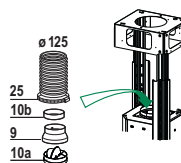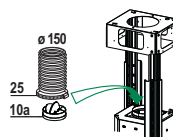

Air outlet – Recirculation Version

- Insert the Connector extensions **14.1** into the side of the Connector **15**.
- Insert the Connector **15** into the Support bracket **7.3** and fix it with the screws.
- Fasten the Support bracket **7.3**, fixing it to the upper part with the Screws.
- Make sure that the Connector extensions outlet **14.1** is in correspondence with the Chimney openings both horizontally and vertically.
- Join the Connector **15** to the Hood canopy outlet using a rigid or flexible pipe \varnothing 150 mm, selection of which is at the discretion of the installation technician.
- Make sure that the Activated charcoal odour filter has been fitted.


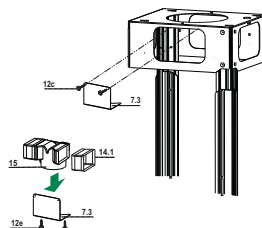


Flue assembly - Mounting the hood body

- Position the upper chimney section and fix the upper part to the frame using the 2 screws **12c** (2,9 x 6,5) provided.
- Similarly, position the lower chimney section and fix the lower part to the frame using the 2 screws **12c** (2,9 x 6,5) provided.


Before fixing the hood canopy to the frame:

- Screw the 2 screws **12f** half way into the holes provided in the sides of the bottom of the frame.
- Remove the grease filters from the hood canopy.
- Remove any activated charcoal filters.
- Lift the hood canopy and engage the screws **12f** in the slots (A) as far as they will go.
- Working from below, fix the hood canopy to the frame (B), using the 4 screws **12q** and 4 washers **22** provided, then tighten all the screws securely.

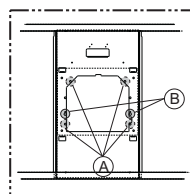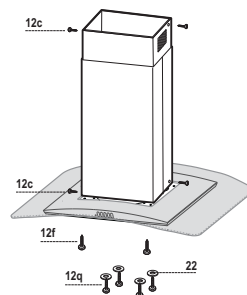

ELECTRICAL CONNECTION

 - Connect the Hood to the Mains power supply, inserting a two-pole Switch with a contact aperture of at least 3 mm.
- Remove the Metal grease filters (see par. on “Maintenance”) and make sure that the power supply Cable is properly inserted in the Suction fan socket.
- Take the wires indicated in fig.1 and pass them through the slot formed on the galvanized diffuser support, as shown in fig.2.



2

1



4




3

- Position the finishing plug **27** over the housing in the diffuser support, fixing it using a screw **12e** (2.9 x 9.5) and applying the 2 cable clamp elements **26** as indicated in figs. 3 and 4.



- Connect the Controls Connector fig. 5.
- Store both the Connectors in the Protective box **24** and close it with 2 Screws **12e** (2.9 x 9.5), provided.

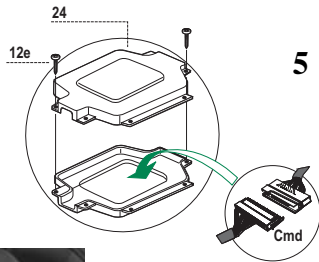


5

- Remove the protective film from the double-sided adhesive on the connection box, and fix it inside the motor compartment fig. 6.



6

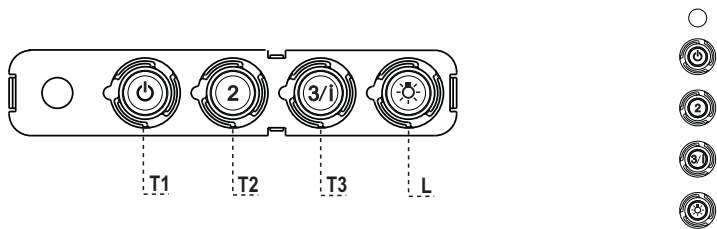

Control panel

BUTTON	LED	FUNCTIONS
T1	Speed	On
		Turns the Motor on at Speed one.
T2	Speed	On
		Turns the Motor off.
T3	Speed	On
		Turns the Motor on at Speed two.
		Turns the Motor on at Speed three.
L	Light	On
		Pressed for 2 Seconds.
		Activates Speed four with a timer set to 10 minutes, after which it returns to the speed that was set previously. Suitable to deal with maximum levels of cooking fumes.


Warning: Button **T1** turns the motor off, after first passing to speed one.

MAINTENANCE

Grease filters

CLEANING METAL SELF- SUPPORTING GREASE FILTERS

- The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.
- Remove the filters one at a time by pushing them towards the back of the group and pulling down at the same time.
- Wash the filters, taking care not to bend them. Allow them to dry before refitting.
- When refitting the filters, make sure that the handle is visible on the outside.

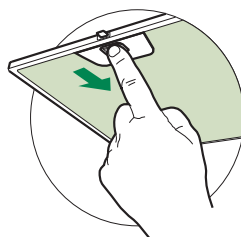


Activated charcoal filter (Recirculation version)

These filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage.

REPLACING THE ACTIVATED CHARCOAL FILTER

- Remove the metal grease filters
- Remove the saturated activated charcoal filter as shown (A).
- Fit the new filters (B).
- Replace the metal grease filters.

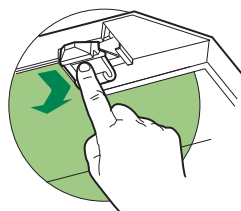


Lighting

LIGHT REPLACEMENT

G4

20W halogen light.

- Remove the snap-on lamp cover by levering it from under the metal ring, supporting it with one hand.
- Remove the halogen lamp from the lamp holder by pulling gently.
- Replace the lamp with a new one of the same type, making sure that you insert the two pins properly into the housings on the lamp holder.
- Replace the snap-on lamp cover.

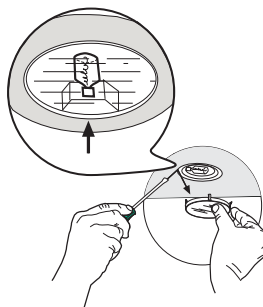


OHJEET JA SUOSITUKSET

⚠ Nämä käyttöohjeet koskevat useita tuuletintyyppiä. On mahdollista, että teksti käsittelee yksityiskohtia, jotka eivät kuulu valitsemaanne tuulettimeen.


ASENNUS

- Valmistaja ei vastaa virheellisestä tai huolimattomasta asennuksesta aiheutuvista vahingoista
- Plenin sallittu turvaväli lasitason ja liesikuvun välillä on 650 mm (jotkut mallit voidaan asentaa alemmas, katso mittoja ja asennusta koskevia kappaleita).
- Tarkista, että käytettävän sähköverkon jännite vastaa liesikuvun sisäpuolella olevaan arvokilpeen merkittyä jännitettä.
- Kytke laite vain maadoitettuun pistorasiaan.
- Yhdistä liesituuletin hormiin putkella, jonka halkaisija on vähintään 125 mm. Hormiin menevän putken on oltava mahdollisimman lyhyt.
- Älä yhdistä liesituuletinta savuhormiin (lämmityskattilat, tulisijat, jne.).
- Mikäli liesituuletinta käytetään muiden kuin sähkölaitteiden (esim. kaasuhella) yhteydessä, on huolehdittava työskentelytilan riittävästä tuetuksesta, etteivät poistettavat kaasut pääse virtaamaan takaisin työskentelytilaan. Keittiössä on oltava ilmanvaihtoaukko puhdasta tuloilmaa varten. Käyttö tapahtuu oikein ja vaaratta kun tilan enimmäispaine ei ylitä arvoa 0,04 mBar.
- Jos virtajohto vahingoittuu, sen saa vaihtaa vain valmistaja tai tekninen huoltopalvelu, näin vältetään kaikki riskit.

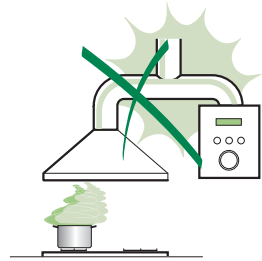


KÄYTTÖ


- Liesituuletin on tarkoitettu vain kotitalouskäyttöön.
- Älä koskaan käytä liesituuletinta muuhun tarkoitukseen kuin, mihin se on suunniteltu.
- Älä koskaan jätä avotulta liesituulettimen alle liesituulettimen ollessa käynnissä.
- Säädä liekin teho siten, että liekki kohdistuu vain astian pohjaan eikä sen reunoille.
- Syviä paistinpannuja on paiston aikana koko ajan pidettävä silmällä, sillä ylikuumentunut öljy voi leimahtaa tuleen.
- Lapset tai henkilöt, joita ei ole opastettu laitteen oikeaan käyttöön, eivät saa käyttää liesituuletinta.
- Liesikuvun alla ei saa valmistaa liekitettäviä ruokia: tulipalon vaara
- Laitetta eivät saa käyttää henkilöt (lapset mukaan lukien), joiden psyykinen, aistien tai mielen terveys on heikentynyt, tai henkilöt, joilla ei ole tarpeellista kokemusta tai taitoa, ellei heidän turvallisuudestaan vastaava henkilö ole valmentanut heitä laitteen käyttöön tai valvo sitä.
- Valvo, etteivät lapset pääse leikkimään laitteella.
- "HUOMIO: Kosketettavissa olevat osat voivat tulla hyvin kuumiksi jos niitä käytetään keittolaitteiden kanssa."



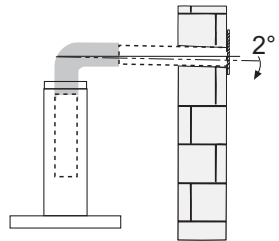


HUOLTO

- Sulje laite tai irrota sen pistoke pistorasiasta ennen hoitoa.
- Puhdista ja/tai vaihda suodattimet annetun ajan kuluttua (Tulipalovaara).
- Puhdista liesituuletin kostealla kankaalla ja miedolla, nestemäisellä pesuaineella.

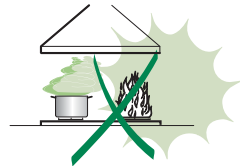


Symboli  , joka on merkitty tuotteeseen tai sen pakkaukseen, osoittaa, että tätä tuotetta ei saa käsitellä talousjätteenä. Tuote on sen sijaan luovutettava sopivaan sähkö- ja elektroniikkalaitteiden kierrätyksestä huolehtivaan keräyspisteeseen. Tämän tuotteen asianmukaisen hävittämisen varmistamisella autetaan estämään sen mahdolliset ympäristöön ja terveyteen kohdistuvat haittavaikutukset, joita voi aiheutua muussa tapauksessa tämän tuotteen epäasianmukaisesta jättekäsittelystä. Tarkempia tietoja tämän tuotteen kierrättämisestä saa paikallisesta kunnantöimistöstä, talousjätehuoltopalvelusta tai liikkeestä, josta tuote on ostettu.

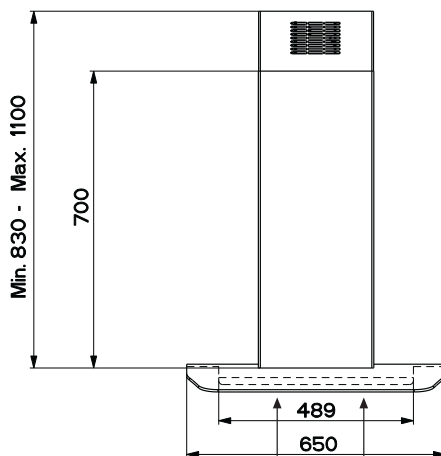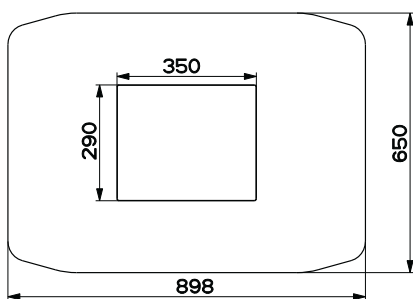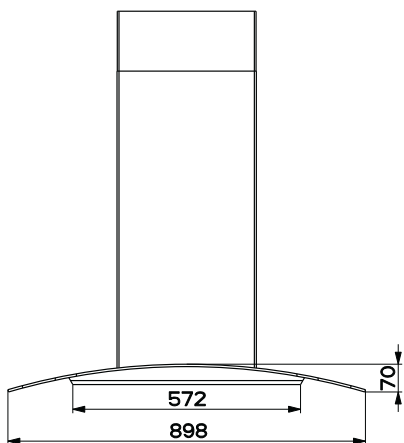

Min.
500mm

Min.
650mm

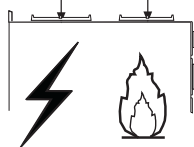



Osat

Viite	Lkm	Tuotteen osat
1	1	Liesituulettimen runko, jossa: Kytkimet, valo, suodattimet
2	1	Teleskooppihormi, johon kuuluu:
2.1	1	Ylähormi
2.2	1	Alahormi
7.1	1	Teleskooppipirun ja imulaite, johon kuuluu:
7.1a	1	Ylärakenne
7.1b	1	Alarakenne
9	1	Kavennuslaippa Ø 150-120 mm
10a	1	Laippa Ø 150 suuntaisventtiilillä
10b	1	Suurennusrenkas Ø 120-125 mm
14.1	2	Ilman ulostuloliitoksen jatke
15	1	Ilman ulostuloliitos
24	1	Liitäntäkotelo
25		Kiinnittimet (ei kuulu toimitukseen)
26	2	Vedonpoistin
27	1	Peitetulppa

Viite	Lkm	Asennusosat
7.3	1	Ilmanvaihtoputken haarakappaleen tuki
11	4	Ruuvitulpat \varnothing 10
12c	8	Ruuvit 2,9 x 6,5
12e	4	Ruuvit 2,9 x 9,5
12f	2	Ruuvit M4 x 80
12g	4	Ruuvit M6 x 80
12h	4	Ruuvit 5,2 x 70
12q	4	Ruuvit 3,5 x 9,5
21	1	Porausmalline
22	8	Välirenkaat \varnothing sis. 6,4
23	4	Mutterit M6

Lkm	Asiakirjat
1	Käyttöohjeet

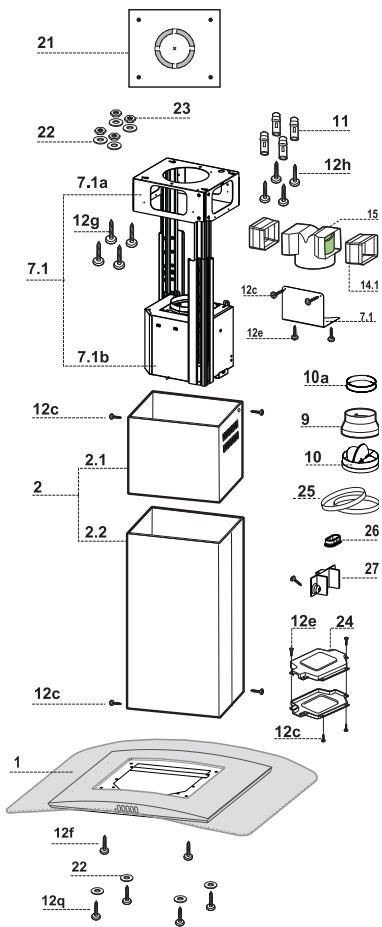

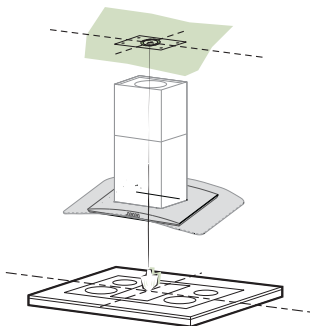

Katon/hyllyn poraaminen ja kehikon kiinnitys

KATON/HYLLYN PORAAMINEN

- Merkitse luotilangan avulla keittotason keskipiste kattoon/hyllyyn.
- Aseta kattoon/hyllyyn toimitettu liesituulettimen malline **21** siten, että keskipiste tulee kohdalleen ja että keittotason ja mallineen sivut ovat samalla kohdalla.
- Merkitse mallineen reikien keskipisteet.
- Poraat reiät seuraavalla tavalla:
 - Massiivibetonikatto: käytettyjen betonimuuriankkurien mukaan.
 - Tiilinen välikatto, kestävä paksuus 20 mm: \varnothing 10 mm (laita heti paikalleen toimitetut tulpat **11**).
 - Puupalkkikatto: käytettyjen puuruuvien mukaan.
 - Puuhylly: \varnothing 7 mm.
 - Virtajohdon aukko: \varnothing 10 mm.
 - Ilman ulostulo (Imuversio): ulkopuolisen poistoputken halkaisijan mukaan.
- Ruuvaa kaksi ruuvia vastakkaisiin kulmiin ja jätä niiden kanta noin 4 - 5mm:n etäisyydelle seinästä:
 - Massiivibetoniin, betonimuuriankkurit, eivät kuulu toimitukseen.
 - Tiiliseen välikattoon, kestävä paksuus noin 20 mm, toimitetut ruuvit **12h**.
 - Puupalkkikattoon, puuruuvit, eivät kuulu toimitukseen.
 - Puuhyllyyn, toimitetut ruuvit **12g**, välirenkaat **22** ja mutterit **23**.

KEHIKON KIINNITYS



- Ruuvaa auki kaksi ruuvia, jotka kiinnittävät alemman hormin ja irrota se kehikosta (alakautta).
- Ruuvaa auki kaksi ruuvia, jotka kiinnittävät ylemmän hormin ja irrota se kehikosta (yläkautta).

Jos haluat säätää kehikon korkeutta, toimi seuraavalla tavalla:

- Ruuvaa auki kehikon reunojen metriruuvia, jotka kiinnittävät sivupalkit toisiinsa.
- Säädä haluamasi kehikon korkeus ja ruuvaa kiinni avaamasi ruuvit.
- Työnnä ylempi hormi paikalleen yläkautta ja anna sen olla kehikon päällä vapaana.
- Nosta kehikkoa, kiinnitä aukot ruuveihin ja työnnä paikalleen.
- Kiristä kaksi ruuvia ja myös toiset kaksi toimitettua ruuvia.

Ennen ruuvien lopullista kiristämistä kehikkoa voidaan säätää siirtämällä sitä. Varo kuitenkin, etteivät ruuvit tällöin irtoa aukoistaan.

- Kehikon kiinnityksen tulee olla varma, siinä on otettava huomioon sekä liesituulettimen paino että laitteeseen mahdollisesti kohdistuvat sivurasitukset. Kun laite on kiinnitetty on tarkistettava, että pohja on tukeva vaikka kehitko olisi taivutusjännityksen alainen.
- Mikäli katto ei ole tarpeeksi vahva kiinnityskohdassa, asentajan täytyy vahvistaa sitä laatoilla ja vastalaatoilla, jotka kiinnitetään rakenteellisesti vahvoihin kohtiin.

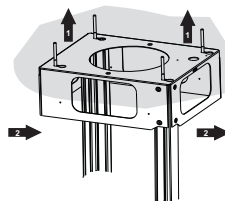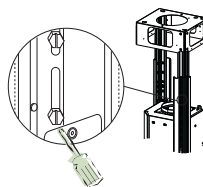

Liitännät

IMUVERSION ILMAN ULOSTULO



Imuversio asennetaan liittämällä liesituuletin ilman ulostuloon jäykällä putkella $\varnothing 150$ tai 120 mm, asentajan valinnan mukaan.

Putkiliitäntä $\varnothing 150$

- Laita laippa **10a**, $\varnothing 150$, liesituulettimen rungon ulostuloon.
- Laita Suurennusrenkas **10b**, $\varnothing 120$ -125 mm
- Kiinnitä putki ohessa toimitetuilla puristimilla **25** (eivät sisälly toimitukseen).


Putkiliitäntä $\varnothing 120$

- Jos käytät putkea $\varnothing 120$ mm, laita kavennuslaippa **9** asentamasi laippaan $\varnothing 150$.
- Kiinnitä putki ohessa toimitetuilla puristimilla **25** (eivät sisälly toimitukseen).
- Molemmissa tapauksissa mahdolliset aktiivihiihisuodattimet täytyy poistaa.

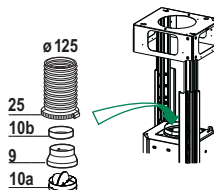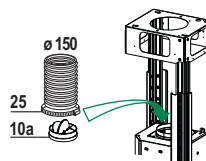

Suodatusversion ilman ulostulo

- Työnnä liitoksen jatkeet **14.1** sivuilta liitokseen **15**.
- Aseta liitos **15** tukeen **7.3** ja kiinnitä se ruuveilla.
- Kiinnitä tuki **7.3** ruuveilla yläosaan.
- Varmista, että liitoksen jatkeet **14.1** tulevat ulos hormin aukkojen kohdalla sekä vaaka- että pystysuunnassa.
- Liitä liitos **15** liesituulettimen ulostuloon jäykällä putkella tai letkulla, Ø 150 mm, jonka valitsee asentaja.
- Varmista, että aktiivihiilihajusuodatin on paikallaan.


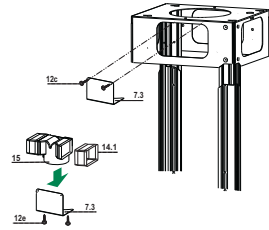


Hormin kokoaminen ja kiinnittäminen liesituulettimen runkoon

- Sijoita ylempi hormi paikalleen ja kiinnitä se kehon yläosaan kahdella toimitetulla ruuvilla **12c** (2,9x 9,5).
- Sijoita sitten alempi hormi paikalleen ja kiinnitä se kehon alaosaan kahdella toimitetulla ruuvilla **12c** (2,9 x 9,5).


Ennen liesituulettimen rungon sijoittamista telineeseen:

- Ruuvaa 2 ruuvia **12f** puoleen väliin telineen alapuolelle sivuasentoon 2 reikää vastaaville kohdille.
- Poista liesituulettimen rungosta rasvasuodattimet.
- Poista mahdolliset aktiivihiilihajusuodattimet.
- Nosta liesituulettimen runkoa ja aseta ruuvit **12f** reikiin (kohta **A**) vasteeseen asti.
- Kiinnitä liesituulettimen runko valmiiseen telineeseen (kohta **B**) alapuolelta tuotetoimitukseen kuuluvilla 4 ruuvilla **12q** ja 4 aluslevyllä **22** ja kiristä kaikki ruuvit loppuun asti.

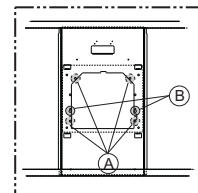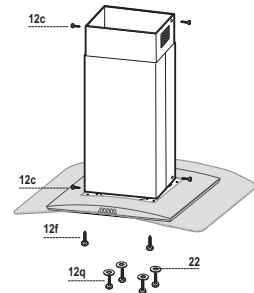

SÄHKÖLIITÄNTÄ

 - Liitä liesituuletin sähköverkkoon kaksinapaisen verkkokytkimen kautta, jonka kontaktien välit ovat ainakin 3mm.
- Poista rasvasuodattimet (katso kappaletta "Huolto") ja varmista, että virtajohdon liitin on oikein imulaitteen pistorasiassa.
- Ota kuvassa 1 näkyvät johdot ja pujota ne sinkityn ilmaritilän tuen reikään, kuten kuvassa 2.



2


1




4

3

- Aseta peitetulppa **27** ilmaritilän tukeen ja kiinnitä se ruuvilla **12e** (2,9 x 9,5), laita paikoilleen 2 vedonpoistinta **26**, kuten kuvissa **3** ja **4**.

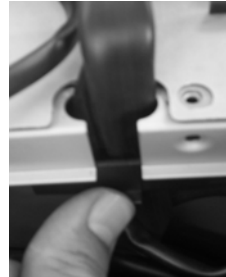

- Liitä kytkimien liitin, kuva **5**.
- Aseta molemmat liittimet suojakoteloon **24** ja sulje se 2 toimitetulla ruuvilla **12e** (2,9 x 9,5).

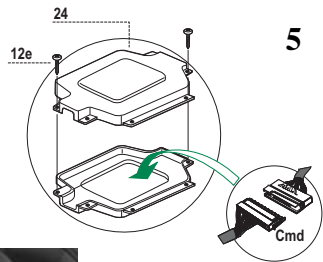


5

- Poista liitäntäkotelon kaksipuolisen liimauhan suojakalvo ja kiinnitä se moottorin sisäpuolelle, kuva **6**.



6

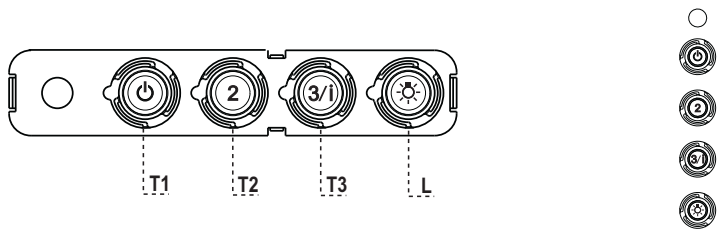

Käyttöpaneeli


PAINIKE		MERKKIVALO	TOIMINNOT
T1	Nopeus	Palaa	Käynnistää moottorin ensimmäisellä nopeudella.
			Sammuttaa moottorin.
T2	Nopeus	Palaa	Käynnistää moottorin toisella nopeudella.
T3	Nopeus	Kiinteä	Lyhyt painallus käynnistää moottorin kolmannella nopeudella.
		Vilkkuva	Kun painiketta painetaan 2 sekunnin ajan. Aktivoi neljännen nopeuden, joka toimii 10 minuuttia. Ajastetun ajan päätyttyä nopeus palaa asetettuun arvoon. Soveltuu käytettäväksi kun savua on paljon.
L	Valot		Sytyttää ja sammuttaa valaistuksen.

Huomio: Painike **T1** sammuttaa moottorin kulkien aina ensimmäisen nopeuden kautta.

Rasvasuodattimet

ITSEKANNATTAVIEN METALLISTEN RASVASUODATTIMIEN PUHDISTUS

- Voidaan pestä myös astianpesukoneessa. Pesu on tarpeen noin 2 kuukauden käytön jälkeen tai useammin, jos laitetta käytetään paljon.
- Irrota suodattimet yksi kerrallaan työntämällä niitä taaksepäin ja vetämällä samalla alaspäin.
- Pese suodattimet. Vältä niiden taivuttamista. Anna suodattimien kuivua ennen niiden paikalleen asettamista.
- Asenna ne paikalleen ja pidä kahva näkyvissä ulkopuolella.

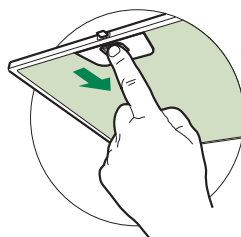


Aktiivihiiლისუოდინ (Suodatinversio)

Suodattimia ei voi pestä eikä uudistaa, vaan ne täytyy vaihtaa vähintään neljän kuukauden välein tai useammin, mikäli laitetta käytetään paljon

AKTIIVIHIIლისუოდATTIMEN VAIHTAMINEN

- Irrota metalliset rasvasuodattimet.
- Irrota vanhat aktiivihiiლისუოდattimet kuten kuvassa (A).
- Asenna uudet suodattimet paikalleen kuten kuvassa (B).
- Laita metalliset rasvasuodattimet paikoilleen.

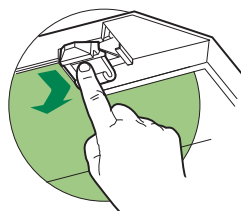


Valaistus

LAMPUNVAIHTO

G4

20 W:n halogeenilamppu

- Poista metallinen lasisuoja- ja pidin vetäen renkaan alta ja samalla tukien sitä kädellä.
- Irrota lamppu lampunpitiimestä.
- Vaihda lamppu uuteen samanlaiseen. Huomioi pistokkeen virheetön asennus sille tarkoitettulle paikalle lampunpitiimessä.
- Aseta painettava lasisuoja- ja pidin uudelleen paikoilleen.

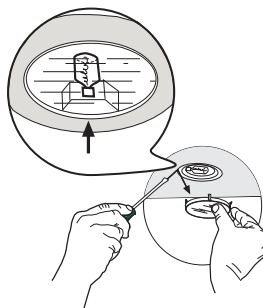

CE